COPYRIGHT© 2007 MERIT ENTERTAINMENT

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

Removal/Installation of Major Assemblies - Ion Aurora

Power Supply Removal

- 1. Turn off and unplug the game.
- 2. Unlock the rear door and open if it is hinged, or remove if it is detachable.
- 3. Reach under the center of the top of the cover to locate the rotary draw latch (see Figure 1). Turn the wing on the latch counterclockwise to disengage.



FIGURE 1 - ROTARY DRAW LATCH INSIDE TOP COVER

4. Unscrew the screw located in the center of the bottom of the cover (see Figure 2). Slowly lift the cover and disconnect the ground wire.



FIGURE 2 - SCREW IN CENTER OF BOTTOM COVER

5. Disconnect the power cord from the power supply. Remove the wing nut securing the OSD board and detach the board from the Velcro on the power supply bracket. Carefully set the OSD board aside. See Figure 3.

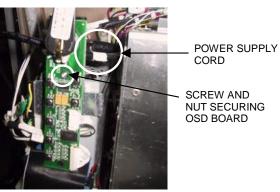


FIGURE 3 - OSD BOARD

Troubleshooting Information - Removal/Installation of Major Assemblies - Ion Aurora

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

Removal/Installation of Major Assemblies -Ion Aurora (cont'd)

6. Remove the electronics tray by unscrewing the thumbscrew located in the middle of the rear of the tray and sliding the tray out. See Figure 4.



THUMBSCREW SECURING **ELECTRONICS TRAY**

FIGURE 4 - REAR VIEW OF ELECTRONICS TRAY

7. If applicable, disconnect the three black connectors (10-, 11- and 12-pin) connecting the electronics tray to the game in order to slide the tray out further (See Figure 5). If your game does not have these connectors, the harness is long enough to remove the tray.

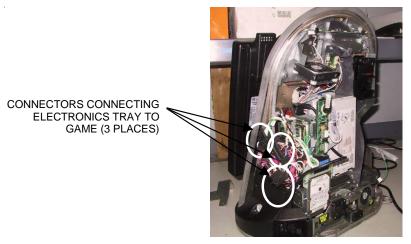


FIGURE 5 - REAR VIEW OF GAME

8. Tilt the hard drive/power supply tower on its hinge 90 degrees to the left, and support with foam (or similiar). Disconnect the 20-pin wire harness coming from the power supply, and cut the tie wrap securing it to the other harnesses. See Figure 6.



FIGURE 6 - POWER SUPPLY

HARNESSES DISCONNECT 20-PIN CONNECTOR FROM

Troubleshooting Information - Removal/Installation of Major Assemblies -Ion Aurora

Megatouch Ion Technical Reference Manual

COPYRIGHT© 2007 MERIT ENTERTAINMENT

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

Removal/Installation of Major Assemblies - Ion Aurora (cont'd)

9. Loosen the screw securing the power supply to the mounting bracket (see Figure 6), and remove the power supply from the game.

Power Supply Installation

- 1. Install the new power supply in the game, and tighten the screw securing the power supply to the mounting bracket. See Figure 6.
- 2. Connect the power supply wire connection. Secure the jumper harness to the other harnesses with tie wrap. See Figure 6.
- 3. Restore the hard drive/power supply tower to its upright position. Slide the electronics tray back into place, making sure that the connectors on the back of the hard drive bracket click into the connectors on the wall of the game, if applicable (see Figure 7). If you disconnected three connectors from the electronics tray to the game (see Figure 5), reconnect them. Secure the tray by screwing in the thumbscrew. See Figure 4.

CONNECTORS ON GAME (3 PLACES)

CONNECTORS ON BACK OF HARD DRIVE (3 PLACES)

NOTE: ELECTRONICS TRAY TURNED AROUND FOR VIEWING PURPOSES.

FIGURE 7 - CONNECTORS ON BACK OF HARD DRIVE BRACKET AND WALL OF GAME

- 4. Reconnect the power cord to the power supply. Reattach the OSD board to the Velcro on the power supply bracket and secure with one wing nut. See Figure 3.
- 5. Reconnect the ground wire to the rear cover and lower the cover into place, carefully lining up the 2 tabs on the cover with the 2 mating holes on the sides of the game (see Figure 8). Make sure the plastic lip on the bottom of the rear cover is behind the metal base. Tighten the screw securing the bottom of the door. See Figure 2. Turn the wing on the draw latch clockwise to engage the latch (see Figure 1).

Troubleshooting Information - Removal/Installation of Major Assemblies - Ion Aurora

COPYRIGHT© 2007 MERIT ENTERTAINMENT

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

Removal/Installation of Major Assemblies - Ion Aurora (cont'd)

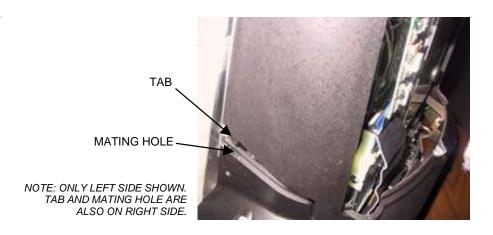


FIGURE 8 - SIDE VIEW OF GAME

- 6. Close (or reattach) and lock the rear door.
- 7. Plug in and turn on the game.